



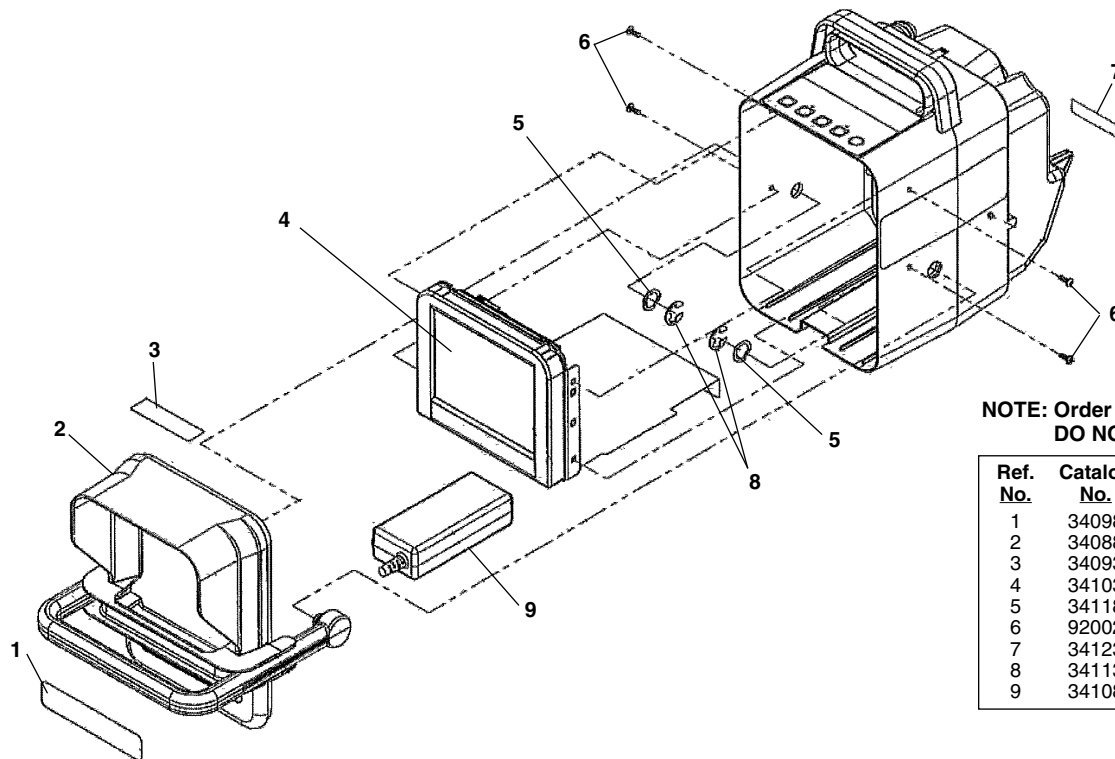


**NOTE: Order parts by Catalog Number only.
DO NOT order by Reference Number.**

Ref. No.	Catalog No.	Description
1	34098	Lid Label
2	34088	Lid Kickstand Asm
3	34093	Icon Label
4	34103	LCD Assembly
5	34118	Wave Washer (2)
6	92002	Screw, #6-32 x 3/8" (4)
7	34123	CSA Label
8	34113	Retaining Ring (2)
9	34108	Power Supply

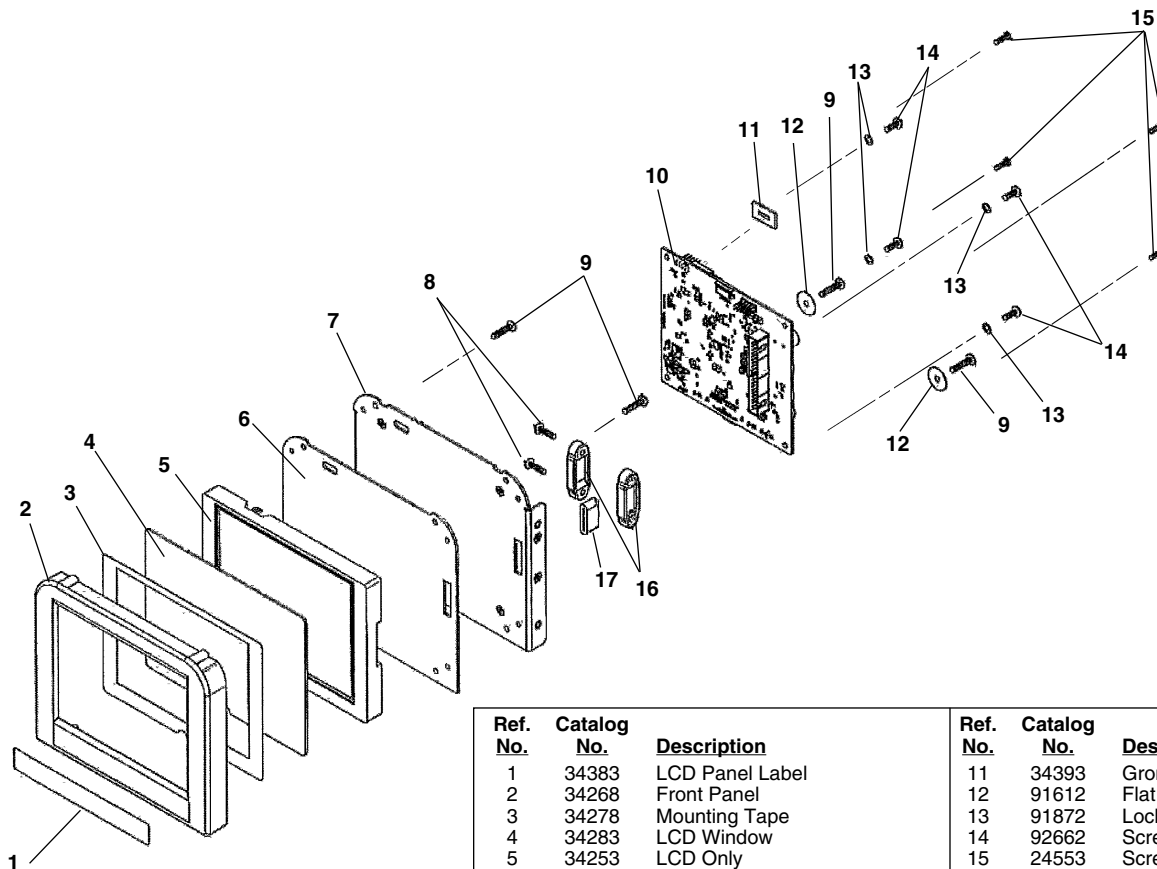

Ref. No.	Catalog No.	Description
1	34383	LCD Panel Label
2	34268	Front Panel
3	34278	Mounting Tape
4	34283	LCD Window
5	34253	LCD Only
6	34273	Mounting Pad
7	34258	LCD Mounting Plate
8	92662	Screw, #6-32 x 3/8" (4)
9	34388	Screw, #6 x 7/8" (4)
10	34263	LCD Interface Circuit Board

Ref. No.	Catalog No.	Description
11	34393	Grommet, Backlight Cable
12	91612	Flat Washer (2)
13	91872	Lockwasher (4)
14	92662	Screw, #6-32 x 3/8" (4)
15	24553	Screw, #4-20 x 3/8" (4)
16	34408	Ferrite Support (2)
17	34413	Ferrite
Not Shown	—	34423 LCD Conductor Cable

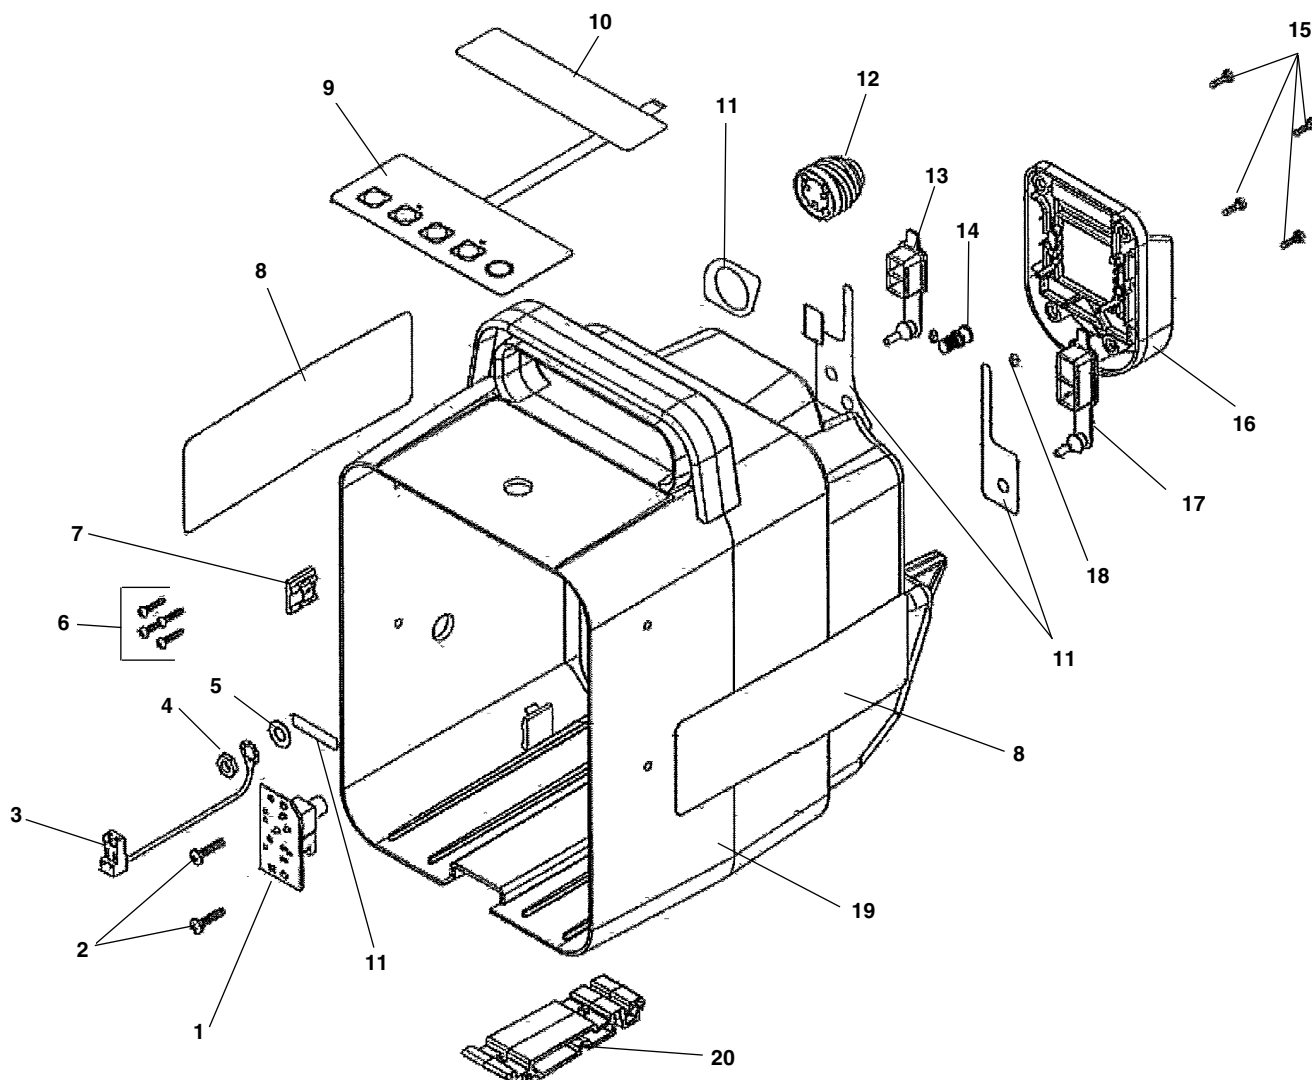

**NOTE: Order parts by Catalog Number only.
DO NOT order by Reference Number.**

Ref. No.	Catalog No.	Description	Ref. No.	Catalog No.	Description
1	34153	Power/Video Circuit Board	11	34158	Rear Label Set
2	34388	Screw, #6 x 5/8"	12	33848	Bulkhead Asm.
3	33883	Ground Terminal Cable Asm.	13	34173	USB Connector Cover
4	33933	Hex Nut	14	34163	Ground Terminal
5	33893	Stainless Steel Washer	15	34183	Screw, #4-20 x 3/8" (4)
6	33908	Screw, #3-24 x 1/2" (4)	16	33868	Battery Socket
7	87247	Adhesive Clip (2)	17	97692	Dust Cover
8	34203	Left & Right Label Set	18	34168	O-Ring (2)
9	34133	Keypad	19	34128	MiniPak Case
10	34138	Top Label	20	34148	Ratchet Kickstand